

Fire Alarm Systems and Equipment
All occupancy types

Fire Alarm System

- Panel: **Green light** – system ok
- Panel: **Any other color light** – **TROUBLE** or **SUPERVISORY** signal **901.6**
- Fire alarm components/system are maintained in an operable condition at all times **901.6**
- Panel: The date of installation is noted on the back-up batteries and replaced every five years **901.6**
- The location of the circuit breaker is noted inside the fire alarm panel **901.6**
- A lock-out is provided on the electrical panel for fire alarm circuit breaker and fire alarm bell **901.6**
- Maintenance, inspection and test documentation is provided **901.6.2**
- A sign is provided on the door if the fire alarm panel is enclosed **509.1**
- Operating, testing and maintenance instructions are provided **901.6.2.1**
- Fire watch is required or evacuate building when system is not working **901.7**
- Construction permit is needed for installation and/or modification of system **105.7.6**